

WEAVERLINE



Operator's Manual

Weaverline Air Raid Debris Blower

Weaverline LLC - Narvon PA

www.weaverline.com

Thank you for choosing a Weaverline Air Raid. A product manufactured in the USA by Weaverline LLC in Narvon PA, founded in 1965.

When used and maintained properly your investment will provide years of dependable performance.

The photos and illustrations throughout this manual were current at the time of printing, but due to continuous improvement, your machine may vary slightly. Weaverline LLC reserves the right to improve, change or modify its equipment, parts or options thereof without obligation of notification or updating previous machines.

Equipment of this nature can cause serious injury or death if operated incorrectly. Safety should be of primary concern when working around this machine.

WARNING

This machine is to be operated only by adults. Read and understand the operator's manual completely before attempting to operate, service or make adjustments.

Never wear loose clothing while operating this equipment, it can become caught in moving parts.

Hydraulic fluid escaping under pressure can penetrate skin. Hydraulic fluid also may infect a minor cut or opening in the skin. If injured by escaping fluid, seek medical attention immediately. Relieve all pressure before disconnecting lines or servicing.

Keep all shields and guards in place.

Check blower for foreign obstructions before applying power.

Keep others away. Make sure only the operator is near the machine during operation.

Make sure all connections are tight and hoses in good condition before applying pressure to the hydraulic system.

Keep all PTO shields in place and functional. Replace damaged PTO shields before operating machine.

Always wear eye protection.

Do not attempt to remove material or obstructions from the blower.

Never leave the operator's platform with the PTO engaged.

OPERATION

1. **Start Up:** When you receive your machine it is your responsibility to adjust the PTO shaft to fit your tractor. Failure to do so can cause damage to your machine. Damage caused from the incorrect length of the PTO shaft is not covered under warranty.
2. Adjust discharge in desired direction. The red painted area in the rotational direction holes in the front panel indicate the direction of output. Note that directing the airflow to the left blows a longer distance, while directing the airflow to the right creates more downward air flow for more powerful cleaning. Always make sure the machine is a sufficient distance from buildings, vehicles and people to avoid damage from the blown debris.
3. Raise the machine clear of the ground, carrying the machine on the 3-point linkage. (The rear roller is to prevent gouging of the ground surface in unintended contact-not a transport roller.)
4. Engage the PTO at tractor idle speed, increase PTO up to 540 PTO rpm maximum speed.

SERVICE

Keep the blower fan clean for best performance. If the performance declines, stop the PTO and check for leaves or other debris build up in the blower fan.

Spring length for the belt tensioner should measure 2" to 2 1/8" overall.

The bearings are sealed and require no lubrication.

SERVICE AND REPAIR

Parts and Service are available for this machine. Please contact the dealer where the unit was purchased for parts and service. If no dealer is available, contact Weaverline LLC to locate a dealer near you.

Weaverline LLC
180 Bootjack Rd
Narvon PA 17555

717-445-6724

info@weaverline.com

www.weaverline.com