

Cam Rod Adjustment Procedure

With the RH Control Lever (Feed Rate Adjustment) in the top (Load & Start) position, and the connecting rod in the top dead center position (A), the edge of the drive pawl (B) is $\frac{1}{8}$ " out over the front of the cam (D). Adjustment can be changed by adjusting yoke (C) on the cam rod.

