

WEAVERLINE



Operator's Manual

Weaverline Air Raid Debris Blower

Weaverline LLC - Narvon PA

www.weaverline.com

Thank you for choosing a Weaverline Air
Raid. A product manufactured in the USA by
Weaverline LLC in Narvon PA, founded in
1965.

When
used and maintained properly your invest-
ment will provide years of de-
pendable performance.

The photos and illustrations throughout this
manual were current at the time of printing,
but due to continuous improvement, your
machine may vary slightly. Weaverline LLC
reserves the right to improve, change or
modify its equipment, parts or options
thereof without obligation of notification or
updating previous machines.

Equipment of this nature can cause serious
injury or death if operated incorrectly.
Safety should be of primary concern when
working around this machine.

WARNING

This machine is to be operated only by adults.
Read and understand the operator's manual
completely before attempting to operate,
service or make adjustments.

Never wear loose clothing while operating
this equipment, it can become caught in
moving parts.

Hydraulic fluid escaping under pressure can
penetrate skin. Hydraulic fluid also may infect
a minor cut or opening in the skin. If injured
by escaping fluid, seek medical attention
immediately. Relieve all pressure before
disconnecting lines or servicing.

Keep all shields and guards in place.

Check blower for foreign obstructions before
applying power.

Keep others away. Make sure only the
operator is near the machine during
operation.

Make sure all connections are tight and hoses
in good condition before applying pressure to
the hydraulic system.

Keep all PTO shields in place and functional.
Replace damaged PTO shields before
operating machine.

Always wear eye protection.

Do not attempt to remove material or ob-
structions from the blower.

Never leave the operator's platform with the
PTO engaged.

OPERATION

1. Adjust discharge in desired direction. The red painted area in the rotational direction holes in the front panel indicate the direction of output. Note that directing the airflow to the right blows a longer distance, while directing the airflow to the left creates more downward air flow for more powerful cleaning. Always make sure the machine is a sufficient distance from buildings, vehicles and people to avoid damage from the blown debris.
2. Raise the machine clear of the ground, carrying the machine on the 3-point linkage. (The rear roller is to prevent gouging of the ground surface in unintended contact-not a transport roller.)
3. Engage the PTO at tractor idle speed, increase PTO up to 540 PTO rpm maximum speed.

SERVICE

Keep the blower fan clean for best performance. If the performance declines, stop the PTO and check for leaves or other debris build up in the blower fan.

Check the oil level in the gearbox every 500 hours of use - add good quality gear oil if needed.

The bearings are sealed and require no lubrication. If you do choose to grease the blower mount bearings, add a maximum of one pump of grease every 500 hours of use.

SERVICE AND REPAIR

Parts and Service are available for this machine. Please contact the dealer where the unit was purchased for parts and service. If no dealer is available, contact Weaverline LLC to locate a dealer near you.

Weaverline LLC

180 Bootjack Rd

Narvon PA 17555

717-445-6724

info@weaverline.com

www.weaverline.com